



Lagoon Creek, SE06-11

Center of map at 58° 20.05' N Lat., 136° 11.20' W Lon.

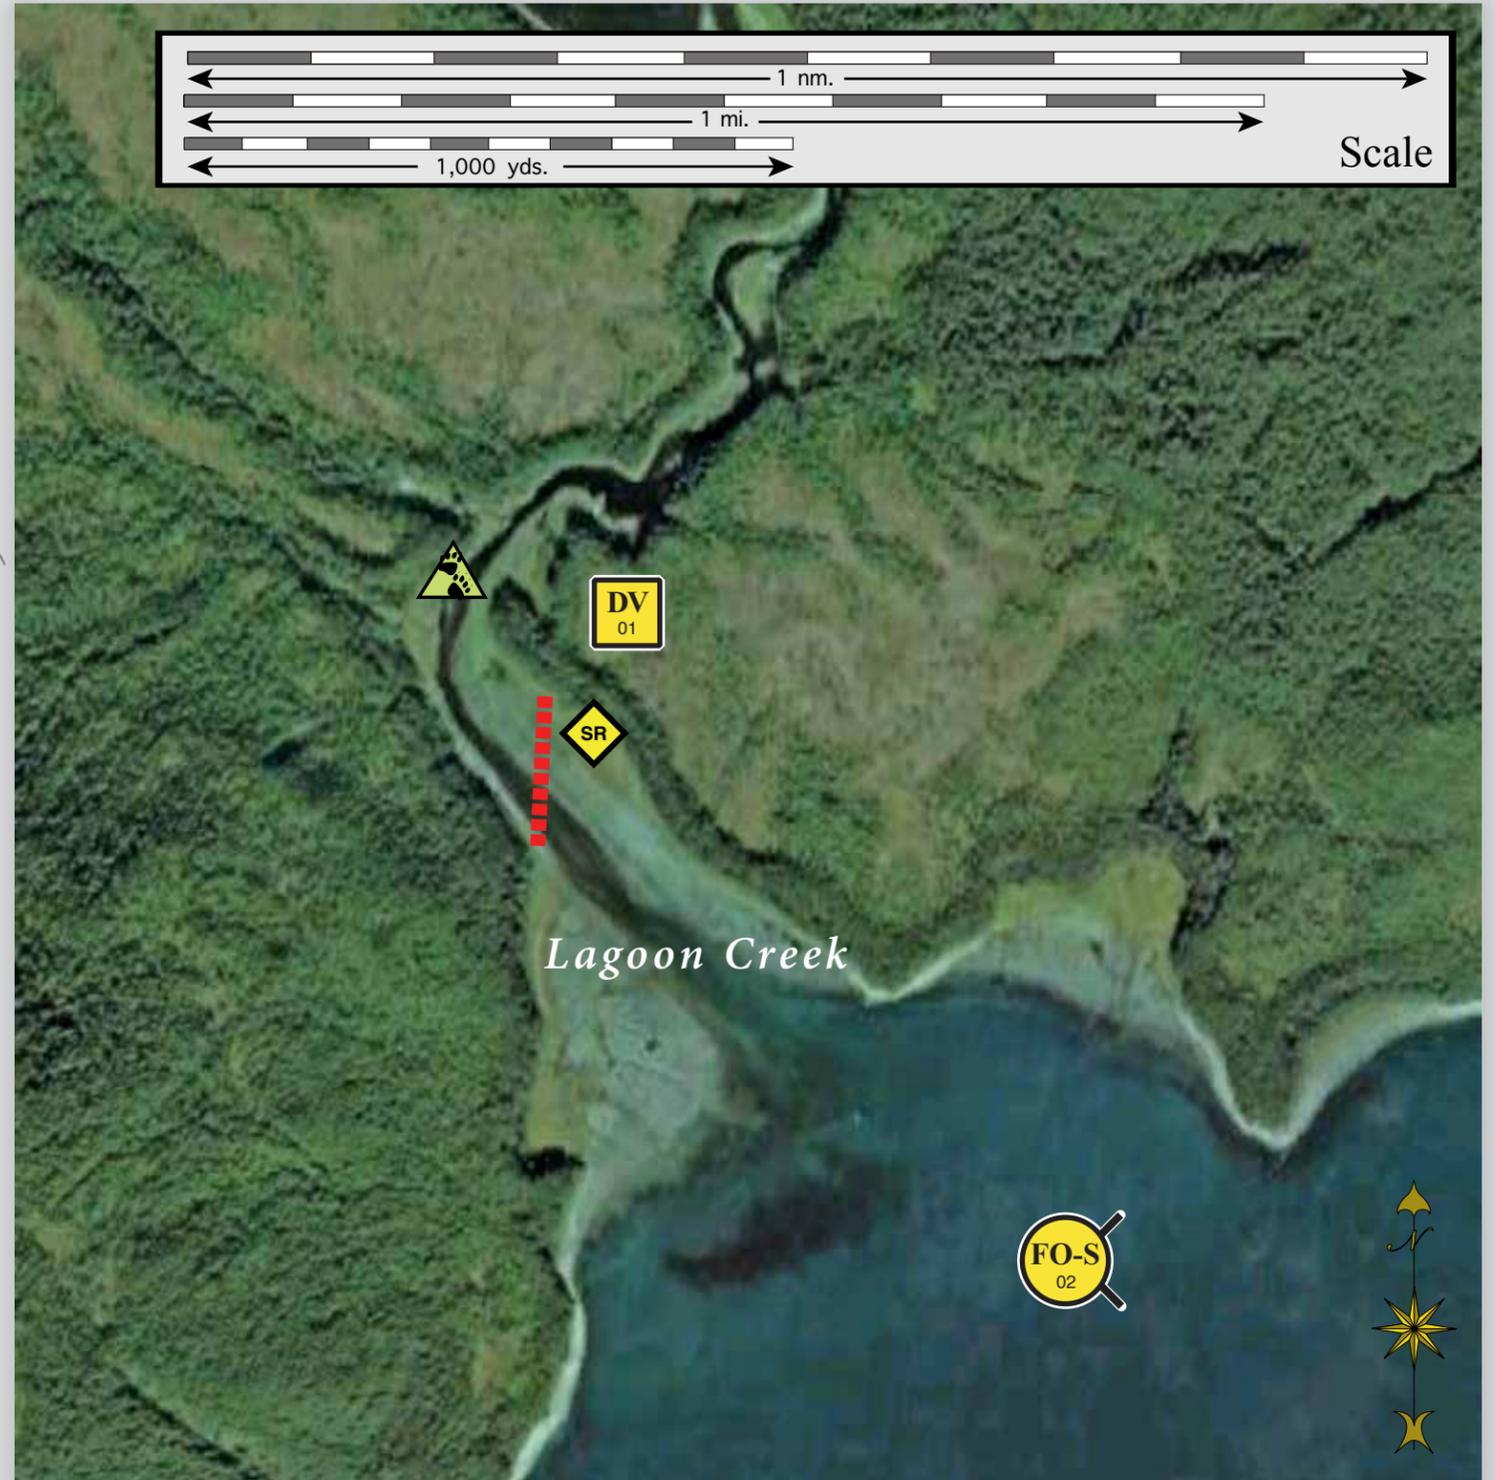

Geographic Response Strategies for Southeast Alaska Subarea, Zone 6

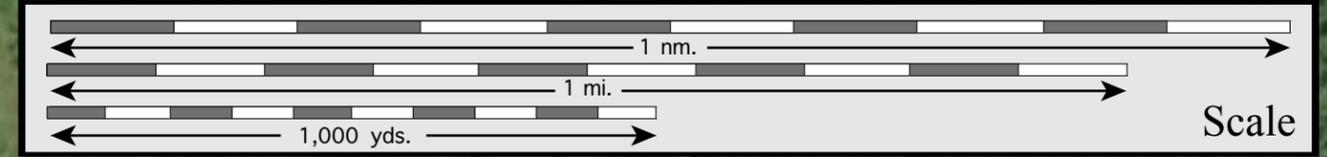

DV01 viewed from the southeast.

Map Legend

	Free-oil Recovery		Shoreside Recovery
	Diversion Booming		Bears in Area, Guards Recommended
	Protected-water Boom		

This is not intended for navigational use.

ID	Location and Description	Response Strategy	Implementation	Response Resources	Staging Area	Site Access	Resources Protected	Special Considerations
SE06-11-01 	Lagoon Creek (Icy Strait) Lat. 58° 20.33'N Lon. 136° 12.27'W	Divert and Collect Divert oil to shore-side collection point determined by spill source and trajectory.	Deploy anchors and boom with skiffs (class 6). Place protected-water boom at proper angle to divert incoming oil to the collection site. Set-up collection site using shore-side collection units or if oil volume is minimal, use sorbent boom or snare line to provide collection of oil. Tend throughout the tide.	Deployment Equipment 700 ft. protected-water boom 2 ea. small anchor systems 8 ea. anchor stakes 1 ea. shore-side collection units Vessels 1 ea. class 3 1 ea. class 6 Personnel/Shift 5 ea. vessel crew 2 ea. response techs Tending Vessels 1 ea. class 3 1 ea. class 6 Personnel/Shift 3 ea. vessel crew 1 ea. response tech	Vessel Platform	Via marine waters Chart 17318	Fish: chum, coho, pink, dolly varden Habitat: exposed tidal flats, marsh, sheltered rocky shore Human Use: commercial fishing, subsistence, high recreational use	Vessel master should have local knowledge. Bears are present in the area. Bear guard required. Consult with Incident Command to ensure ADFG-Title 16 and ADNR-Title 41 permits have been obtained. Consult the Site Selection Matrix for cultural resources designation. Consult the ADEC "Spill Tactics for Alaska Responders" manual for additional information on the deployment of these tactics. Site surveyed: not surveyed Tested: not yet
SE06-11-02 	Lagoon Creek (Icy Strait) Nearshore waters in the general area of: Lat. 58° 20.33'N Lon. 136° 11.35'W	Free-oil Recovery Maximize free-oil recovery in the offshore & nearshore environment Hoonah depending on spill location and trajectory.	Deploy free-oil recovery strike teams upwind and up current of Lagoon Creek. Use aerial surveillance to locate incoming slicks.	Deploy multiple free-oil recovery strike teams as required to maximize interception of oil before it impacts sensitive areas.	Vessel Platform	Via marine waters Chart 17318	Same as SE06-11-01	Vessel master should have local knowledge. Use extreme caution, shoal waters with numerous reefs and rocks, shallow mud flats and channels.

NOTE: Sensitive resource information can be found on other maps which can be accessed through the sensitive area section of the SE AK Sub-Area Contingency Plan: http://www.dec.state.ak.us/spar/perp/plans/scp_se.htm.